

Shift TX



115		216	329
317		418	330
519		620	331
721		822	332
923		1024	333
1125		1226	334
1327		1428	335
SHIFT		SHIFT LOCK	336
113		214	337
315		416	340
517		618	341
719		820	342
921		1022	343
1123		1224	344
SWING FR UP PROP		SWING FR DN PROP	416
SWING R		SWING R	417
LOWER FR PUSH		RAISE FR PULL	418
LOWER R PUSH		RAISE R PULL	419

SHIFT CLOSE	SHIFT CLOSE	427
SHIFT	SHIFT LOCK	428
OUTER N 1	OUTER N 1 SHIFT	435
OUTER E 2	OUTER E 2 SHIFT	436
OUTER W 29	OUTER W 30	437
OUTER S 31	OUTER S 32	438
121	222	877
323	424	878
525	626	879
727	828	880
929	1030	881
FORWARD AUTO HOME	TOP UP ROTATE TOP	900
REVERSE ROTATE TS	TOP DOWN ROTATE SIDE	901
LEFT OUT Ts1 OUT	LEFT IN Ts1 IN	902
RIGHT IN Ts2 IN	RIGHT OUT Ts2 OUT	903
AUTO MANUAL	SHIFT	904
MOTOR START STOP	LIGHTS ON-OFF	856
DUMP UP LEVEL LEFT FRONT UP	DUMP DN LEVEL LEFT FRONT DN	1038

TONGUE EXT IN LEVEL RIGHT FRONT UP	TONGUE EXT OUT LEVEL RIGHT FRONT DN	1039
TAIL EXT IN LEVEL LEFT REAR UP	TAIL EXT OUT LEVEL LEFT REAR DN	1040
REAR SIDE-SHIFT LEFT LEVEL RIGHT REAR UP	REAR SIDE-SHIFT RIGHT LEVEL RIGHT REAR DN	1041
CHAIN DRIVE FT FT EXT TOP FRAME IN	CHAIN DRIVE BK FT EXT TOP FRAME OUT	1042
SIDWAY LEFT UP BARN SPIN UP	SIDWAY LEFT DN BARN SPIN DN	1043
SIDWAY RIGHT UP JACK UP	SIDWAY RIGHT DN JACK DN	1044
SIDWAY DRIVE LT MULE CARRIAGE IN	SIDWAY DRIVE RT MULE CARRIAGE OUT	1045
ENGINE STOP	ENGINE START	1046
Door 1-10 Door 11-20 Door 1 Door 11 Door 2 Door 12 Door 3 Door 13 Door 4 Door 14 Door 5 Door 15 Door 6 Door 16 Door 7 Door 17 Door 8 Door 18 Door 9 Door 19	Door 1-10 Door 11-20 Door 1 Door 11 Door 2 Door 12 Door 3 Door 13 Door 4 Door 14 Door 5 Door 15 Door 6 Door 16 Door 7 Door 17 Door 8 Door 18 Door 9 Door 19	1106
		1107
		1108
		1109
		1110
		1111
		1112
		1113
		1114
		1115

Shift TX



Door 10 ↑ Door 20 ↑	Door 10 ↓ Door 20 ↓	1116
F. HR LOWER RAISE	R. HR LOWER RAISE	1234
F.KNUCKLE ADJ.RT ADJ. LT	R.KNUCKLE ADJ.RT ADJ. LT	1235
OUTRIGGER BEAM RT IN OUT	OUTRIGGER BEAM LT IN OUT	1236
RT JACK EXT. RETRACT	LT JACK EXT. RETRACT	1237
TABS ON OFF		1238
F-TOW EYE LOWER RAISE	R-TOW EYE LOWER RAISE	1250
L.O. BEAM IN OUT	R.O. BEAM IN OUT	1251
L - JACK EXT RET	R - JACK EXT RET	1252
TABS. ON/OFF	OPTION ON/OFF	1253
↑ D4 Front	↓ D4 Front	1329
D1 Fwd D4 Fwd	D1 Back D4 Back	1330
D1 Rear D4 Rear	D1 Rear D4 Rear	1331
WINDOW OPEN GARAGE OPEN	WINDOW CLOSE GARAGE CLOSE	1479
BOOM IN LADDER UP	BOOM OUT LADDER DOWN	1480
EXTEND ON	RETRACT OFF	1481
TRANS UN-LOCK BLADE 1 DN	TRANS LOCK BLADE 1 UP	1531
TILT RT BLADE 2 DN	TILT FWD BLADE 2 UP	1532

LIFT DN BLADE 3 DN	LIFT UP BLADE 3 UP	1533
R-STAB DN BLADE 4 DN	R-STAB UP BLADE 4 UP	1534
L-STAB DN L-GATE CLOSE	L-STAB UP L-GATE OPEN	1535
AUX 1 R-GATE CLOSE	AUX 2 R-GATE OPEN	1536
AUX 3 L-PAD DN	AUX 4 L-PAD UP	1537
WATER R-PAD DN	THROTTLE R-PAD UP	1538
BED RAISE STEER LOCK	BED LOWER STEER UNLOCK	1545
WINCH IN STEER LEFT	WINCH OUT STEER RIGHT	1546
EXTENSION IN STROBE LIGHTS	EXTENSION OUT WORK LIGHT 1	1547
TAIL LEFT WORK LIGHT 2	TAIL RIGHT WORK LIGHT 3	1548
DRILL JACK 2 ↓ DRILL JACK 2	DRILL JACK 3 ↓ DRILL JACK 3	1582
DRILL JACK 1 ↓ DRILL JACK 1	DRILL JACK 4 ↓ DRILL JACK 4	1583
ALL JACKS DRILLS ↓ ALL JACKS DRILLS	DRILLS JACKS	1584
PANS ↓ PANS	LIFT PINS ↓ LIFT PINS	1585
SIDE SHIFT FPP → SIDE SHIFT FPP	ROTATE FPP → ROTATE FPP	1586
STEER CRANE → STEER CRANE	SIDE SHIFT HOIST → SIDE SHIFT HOIST	1587
TRAVEL FWD TRAVEL BWD	HOIST ↑ HOIST ↓ HOIST	1588
RPM RPM RPM	EM STOP	1589

TRAVEL PRESET ↓ TRAVEL PRESET	HOIST PRESET ↑ HOIST PRESET ↓ HOIST PRESET	1590
UP 1 5 UP	DOWN 1 5 DOWN	1598
OPEN 1 5 OPEN	CLOSE 1 5 CLOSE	1599
UP 2 6 UP	DOWN 2 6 DOWN	1600
OPEN 2 6 OPEN	CLOSE 2 6 CLOSE	1601
UP 3 7 UP	DOWN 3 7 DOWN	1602
OPEN 3 7 OPEN	CLOSE 3 7 CLOSE	1603
UP 4 8 UP	DOWN 4 8 DOWN	1604
OPEN 4 8 OPEN	CLOSE 4 8 CLOSE	1605
SWING IN WINCH 1 IN	SWING OUT WINCH 1 OUT	1648
UNDER-REACH EXTEND IN WINCH 2 IN	UNDER-REACH EXTEND OUT WINCH 2 OUT	1649
BED RAISE ENGINE STOP	BED LOWER ENGINE START	1655
WINCH IN ENGINE CHOKE	WINCH OUT QUAD FLASHERS	1656
EXTENSION IN	EXTENSION OUT	1657
STEER LOCK	STEER UNLOCK	1658
STEER LEFT	STEER RIGHT	1659
↑ BED	↓ BED	1670
ROOF UP SPLIT DECK UP	ROOF DOWN SPLIT DECK DOWN	1671

Shift TX



			1672
			1673
			1674
			1675
			1677
			1678
			1679
			1687
			1688
			1689
			1724
			1793
			1794
			1795
			1804
			1805
			1806
			1807

			1808
			1809
			1825
			1826
			1831
			1832
			1833
			1865
			1869
			1870
			1874